



## Mail Server Details

**Main SMTP Server:** mail.iinet.com.au

**Login:** Your iinet address

**Password:** Your password

**Port:** 587

**Authentication:** Yes

**Method:** STARTTLS


iinet requires DNS entries to be added also. They use a Primary and Secondary server Australia wide  
On your MFD these will generally be found under Network Settings then TCPIP

| iinet DNS Entries             |
|-------------------------------|
| Primary DNS: 203.0.178.191    |
| Secondary DNS: 203.215.29.191 |

# Setup on the MFD Web Interface

## Desktop Series 1

1. Input your printers TCPIP address into your web browser

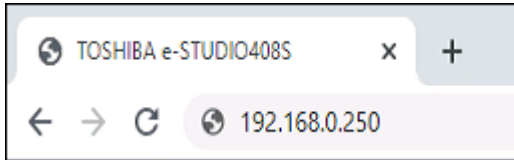

2. Go to Settings > Network Port > SMTP Setup

### SMTP Setup

Primary SMTP Gateway  Required.

Primary SMTP Gateway Port  Default Port: 25 Range: 1-65535

Secondary SMTP Gateway

Secondary SMTP Gateway Port  Default Port: 25 Range: 1-65535

SMTP Timeout  Range: 5-30 seconds.

Reply Address  Example: jsmith@mydomain.com.

Use SSL/TLS

Validate CA

---

### Authentication

SMTP Server Authentication

Device-Initiated E-mail  E-Mail Alerts, Fax Forwarding, etc.

User-Initiated E-mail

---

### Device Credentials

Use Active Directory Device Credentials  Status: Not Joined

Device Userid

Device password

Kerberos 5 REALM  Required for some Authentication Types.

NTLM Domain  Required for NTLM Authentication.

3. Input your smtp details and press "Submit"


4. Next go to Settings > Network Port > TCPIP

|                           |                                  |   |                                  |   |                                  |   |                                  |  |
|---------------------------|----------------------------------|---|----------------------------------|---|----------------------------------|---|----------------------------------|--|
| DNS Server Address        | <input type="text" value="203"/> | . | <input type="text" value="0"/>   | . | <input type="text" value="178"/> | . | <input type="text" value="191"/> | If DHCP or BOOTP is not on the network |
| Backup DNS Server Address | <input type="text" value="203"/> | . | <input type="text" value="215"/> | . | <input type="text" value="29"/>  | . | <input type="text" value="191"/> |  |

5. Scroll down to the DNS server address and input your DNS information
6. Press "Submit"

## Desktop Series 2

1. Input your printers TCPIP address into your web browser

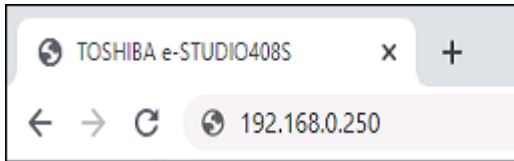

2. Go to Settings > Email Setup

### E-mail Setup

Primary SMTP Gateway  Required.

Primary SMTP Gateway Port  Range: 1-65535. Default = 25.

Secondary SMTP Gateway

Secondary SMTP Gateway Port  Range: 1-65535. Default = 25.

SMTP Timeout  Range: 5-30 seconds

Reply Address

Always use SMTP default Reply Address

Use SSL/TLS

Require Trusted Certificate

SMTP Server Authentication

Device-Initiated E-mail  E-Mail Alerts, Fax Forwarding, etc.

User-Initiated E-mail

Use Active Directory Device Credentials

Device Userid

Device Password

Kerberos 5 REALM  Required for some Authentication Types.

NTLM Domain  Required for NTLM Authentication.

Disable "SMTP server not set up" error

3. Input your SMTP Details and press "Save"


4. Next click on Network Ports > TCP/IP

| TCP/IP                                |  |   |
|---------------------------------------|--|---|
| Set Hostname                          | <input type="text" value="ET0021B7475214"/>        | Example: 'BOBS-PRINTER' (US-ASCII, alphanumeric characters and hyphen only) |
| Domain Name                           | <input type="text"/>                               | test.company.com  |
| Allow DHCP/BOOTP to update NTP server | <input checked="" type="checkbox"/>                |   |
| Zero Configuration Name               | <input type="text" value="TOSHIBA e-STUDIO479CS"/> | Example: Ben's Office Printer   |
| Enable Auto IP                        | <input checked="" type="checkbox"/>                |   |
| DNS Server Address                    | <input type="text" value="203.0.178.191"/>         | If DHCP or BOOTP is not on the network                                      |
| Backup DNS Server Address             | <input type="text" value="203.215.29.191"/>        |   |


5. Input DNS entries then press "Save"

## EBN and EBX using TopAccess

1. Input your printers TCPIP address into your web browser

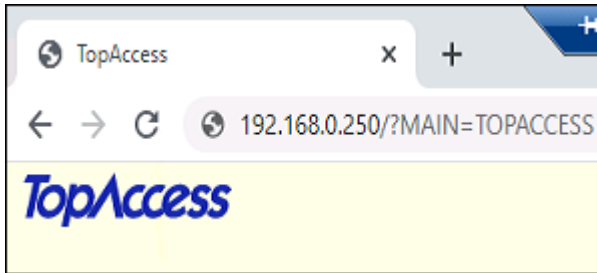

1. Login with User name (admin) and Password (123456)
2. Then click on Administration > Network > SMTP Client

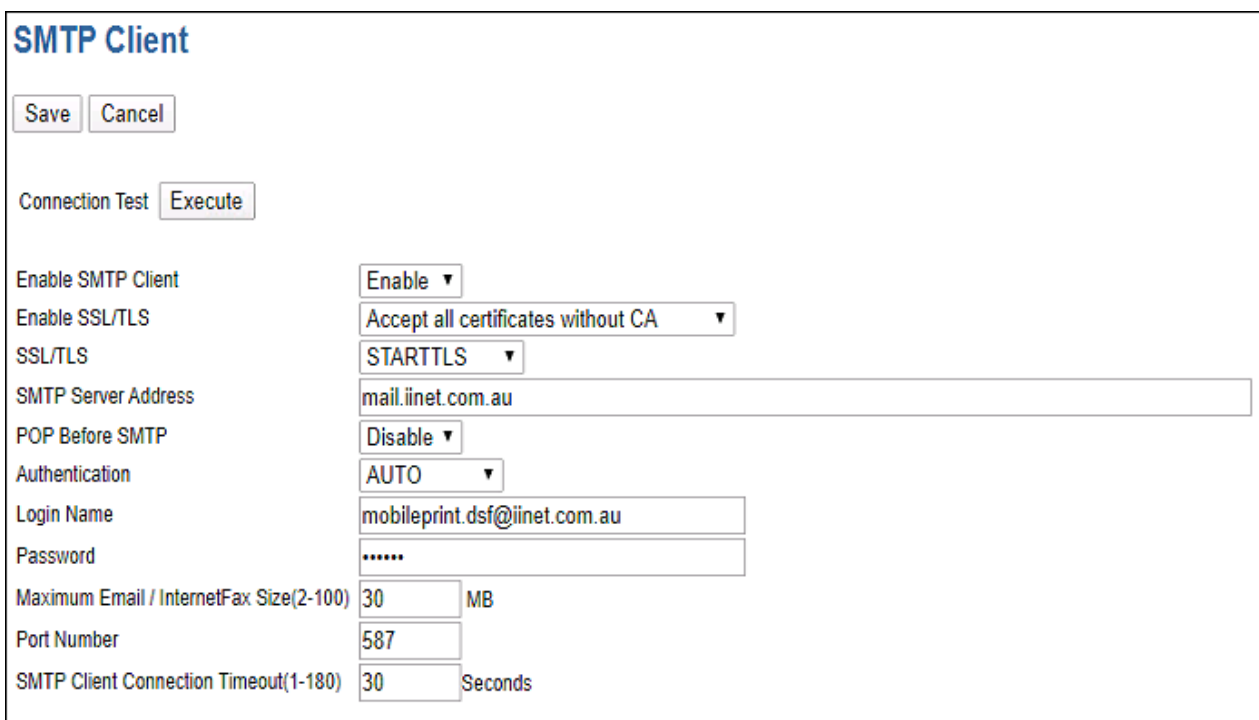

3. Input your SMTP details.
4. Press "Save"
5. Click on "Network"



6. Click on "DNS"

7. Input your DNS entries

| DNS                          |          |     |     |     |
|------------------------------|----------|-----|-----|-----|
| Enable DNS                   | Enable ▾ |     |     |     |
| Primary DNS Server Address   | 203      | 0   | 178 | 191 |
| Secondary DNS Server Address | 203      | 215 | 29  | 191 |

8. Scroll to the bottom and press “Save”

9. You also need to set a valid send from address, go to Administration > Setup > Email

| General Setting |                              |
|-----------------|------------------------------|
| From Address    | mobileprint.dsf@iinet.com.au |
| From Name       | es5015AC                     |

10. Input a valid email account here.

11. Press “Save”