

EASY WIFI SETUP

A4 Desktop Series II





Purpose

This guide outlines the setup for an A4 Desktop device on a Wireless LAN. A compatible Wireless Adapter such as N8732 802.11a/b/g/n/ac Wireless Printer Server (option) is required for this procedure.

Models Supported

A4 Desktop Series II
Colour
- e-STUDIO 338CS / 388CS / 388CP / 389CS
- e-STUDIO 479CS
Monochrome
- e-STUDIO 408S / 408P
- e-STUDIO 409S / 409P
- e-STUDIO 478S
- e-STUDIO 528P




Wifi Setup

Installation


1. On the Control Panel, click on "Settings"



2. Scroll down to Network/Ports \rightarrow Wireless \rightarrow Setup On Printer Panel

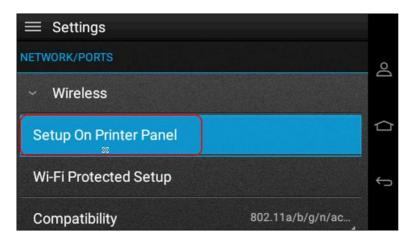


3. Choose the name of your WIFI Network from the list

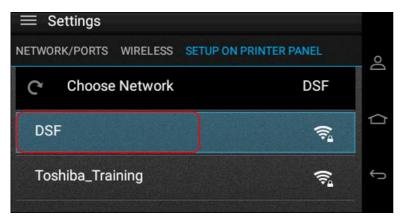




4. Enter your WIFI password and press "OK"

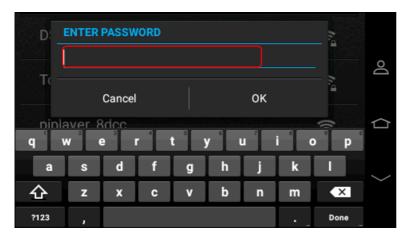

5. A message will display to confirm that you have successfully connected to the WIFI. Click "OK" to continue

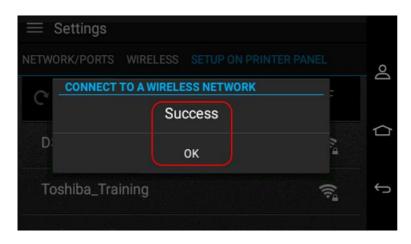

Important Note: You will be prompted during the installation of your WIFI to disconnect from your LAN.

TOSHIBA

Check Network Settings

- 1. From a browser, type in the A4 Desktop device's ip address on the URL field to access the A4 Desktop device's Embedded Web Server
- 2. Go to Reports \rightarrow Network \rightarrow Print Network Setup Page
- 3. A detailed list of your network settings will print
- 4. Locate the "Wireless" section and confirm if the WIFI adaptor has been setup successfully.

